



**WARNING: Observe these instructions to avoid personal injury and damage to property. NEVER leave a burning fire unattended. HOT burn risk.**


**Please carefully read and follow these instructions to assemble your unit.  
Please retain these instructions for future use**

Images are only an indication of the general appearance and design. Specific aspects may change from time to time.

## USER ASSEMBLY INSTRUCTIONS

### Part list:

NO.	Parts	Qty.
A	Top ring	1
B	Ash bucket	1
C	Fire pit	1
D	Foot pad	4
E	Poker	1
F	Grill grate	1
G	Carry bag	1

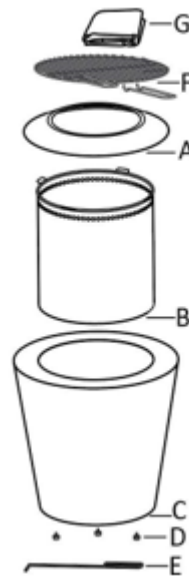

### Assembly Instructions:

1. Assemble 4\*Foot pad (D) into fire pit (C)

**Now assembly is completed.**

Set up on a flat surface, away from anything that could pose a fire threat. As this item is low to the ground, always keep an eye on the fire.



## SPECIFIC INSTRUCTIONS FOR YOUR FIRE PIT

Please read the following instructions and recommendations. Exercise CAUTION at all times for the safe enjoyment of a Fire Pit. Please keep these instructions in a safe place so you can read them again from time to time.

- ALWAYS FOLLOW THE USER INSTRUCTIONS Failure to do so may result in personal injury or fires spreading to property. Please remember you are dealing with a real fire.
- PLACE your Fire Pit on a FLAT surface; you should NOT place it on a sloping surface where it might tip over.
- This should be a NON-FLAMMABLE surface such as stone, gravel or bricks. Do not place it on grass which may turn brown. Do not place on wood which may turn brown or catch fire. DO NOT PLACE on decking which may turn brown or catch fire.
- DO NOT place your Fire Pit near bushes or plants or under trees; the heat will damage the leaves and is a fire risk.
- DO NOT place your Fire Pit under an awning; it will burn or melt.
- DO NOT place your Fire Pit near garden furniture, specially made of fabric or woven plastic, which may melt or catch fire. We recommend at least one-meter minimum distance.
- DO NOT make a real fire inside a conservatory, summer house or garden shed. Fire Pits burning wood, coal or charcoal can only be used outside, because fumes and gases from the fire are poisonous and dangerous to health. Carbon monoxide gas has no colour nor odor and is deadly.
- DO NOT touch the Fire Pit when burning, the surface is hot, and you will burn your fingers. We recommend that gloves are used at all times.
- DO NOT allow pets near the fire.
- DO NOT allow children especially small children to play or run around the fire.
- DO NOT over fuel the Fire Pit. If flames are coming out of the top of the Fire Pit, then the fire is too large!
- DO NOT PANIC if fuel falls out of the Fire Pit or for any reason flames spread out from the fire, simply extinguish spreading flames with earth, sand or water. DO NOT throw water on a real fire other than in an extreme emergency.
- DO NOT use petrol, paraffin or fire lighters to start the fire (or as fuel). The best method is balled newspaper and dry kindling. The best fuel is wood or charcoal.
- NEVER LEAVE A BURNING FIRE PIT UNATTENDED. Failure to do so may result in the fire spreading out of control and damage or destruction of property. Please ensure the fire is completely out before leaving the Fire Pit unattended.
- DO NOT attempt to move any real Fire Pit fire while the fire is burning.
- We advise against using a real Fire Pit fire when it is windy. Strong wind may tip over a Fire Pit which is a fire risk. Wind may disperse burning material, which is a fire risk, particularly if the surroundings are very dry.
- PLEASE be a good neighbour and be reasonable in the use of your Fire Pit fire, keep smoke and noise to a minimum.